 


Klick U1

PTZ Camera

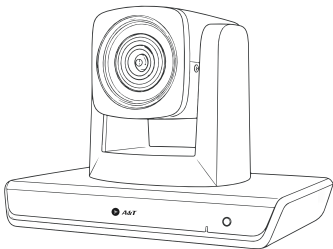

Manual

 


EXPERIENCE NEXT

Overview

The PTZ is the high-quality Video conference call device connected with computers and other intelligent devices. It is provided with the latest generation Video processing algorithm of Low light correction, Auto Focus, Low light correction and etc., Its voice quality of the call is clear and natural. Its body is light and the device and cable are integrated, which is easy to carry, install and operate. It is suitable for Software based Video conference call and other application scenarios.

Packing list

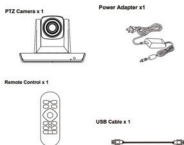

About the Device

Front View



1. Camera Module
2. Power Indicator When the camera is in the pull-current state, the indicator light is not on; When setting the preset point (long press), the indicator will blink twice; When the preset point is called (short press), the indicator will flash once.
3. 3 IR Sensor

Bottom View

 


4. USB
5. LAN (For Controller)
6. LINE IN (reserved)
7. Power (DC12V)
8. Installation Hole 1/4" inch screw, used to fix the camera.

Device connection

Connect USB data cable:

Insert the USB cables of the both Camera & Speakerphone into the USB interface of computer, and the driver will be installed automatically. After installation, the computer screen will prompt that it is ready or the device can be used. At this time, the host green indicator is always ON, indicating that it has been connected.

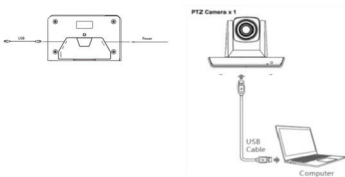

Remote Control



No.	key manual
1. Power	Open/close the camera.
2. Menu	Open/close the OSD menu.
3. Zoom	zoom in on the image zoom out on the image.
4. Direction	Menu state, set menu options; Non-menu state, or used for vertical adjustment of the screen, or used for horizontal adjustment of the screen.
5. HOME	Menu state, confirm to enter; Non-menu state, the screen returns to the initial position.
6. Focus	—Near focus; —Far focus.
7. Autofocus	Camera autofocus.
8. Autoframing	Reserved.
9. Number	Set or call a preset .

How to operate:

1)PTZ This camera supports PTZ control. Through the direction key to control the head, so as to adjust the position of the picture; Through the zoom key to adjust the size of the current screen.

2)Setting/Calling preset Long press the number key for more than 3 seconds, the preset can be set. Short press the number key to call the preset, the screen will quickly arrive at the preset position.

3)Menu After entering the menu, select the menu option through the direction key. After entering the option by pressing the HOME key, adjust the content of the option through the horizontal direction key. Press the menu key to return to the previous level until the exit menu.

Points for attention

1. You can't connect multiple Cameras or Speakerphones to the computer intelligent device at the same time, including the native device, or else, a squeak may appear during the call.

2. It is required to connect the USB cable directly to the USB interface of the computer device. It may cause operation problems if it is connected through the USB hub.

3. Check whether the device driver is installed and connected successfully: check whether the default device displays "native device model" in the options of playback (output) and recording (input) of the sound and audio device properties of the computer control panel option, if not, re-select "Native device model" and confirm.

4. When use, it can adjust the volume through the speaker option on the computer if necessary. When using instant messaging or Internet phone application software, please set the device of the model as the preferred audio device. Do not repair the device by yourself, or else, it may cause electric shock. Please contact your seller if there is any problem needing repair.

Service and Support:

support@atnetindia.net

Manufactured in India by

