IKON 100-4K

USB Video Soundbar

User Manual

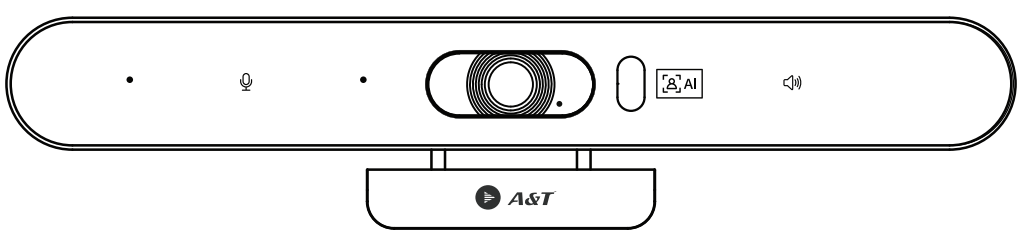

EXPERIENCE NEXT

Overview

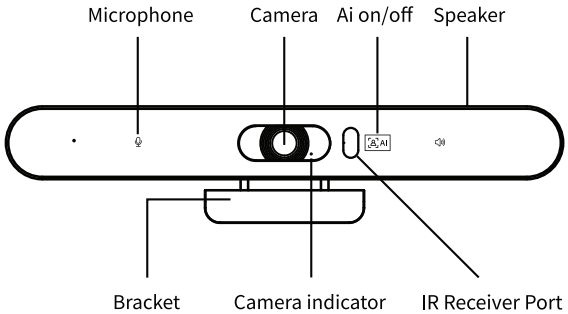

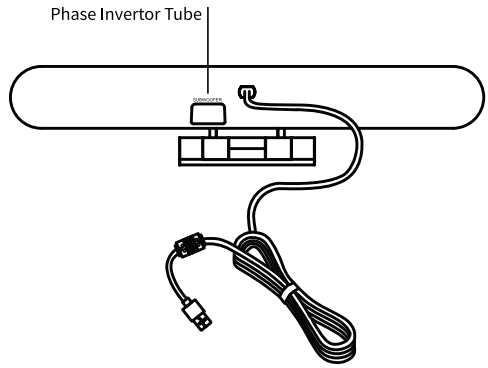

Packing List

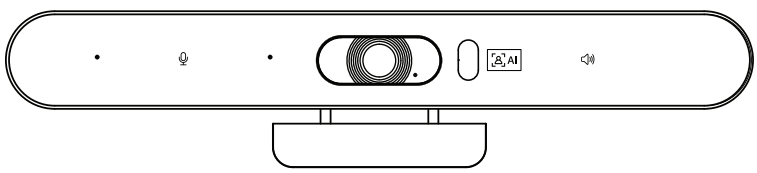

All in One Video Soundbar

Camera Remote Control

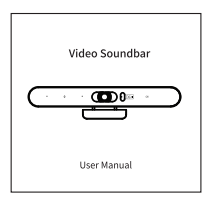

Quick Installation Guide

Setup

1

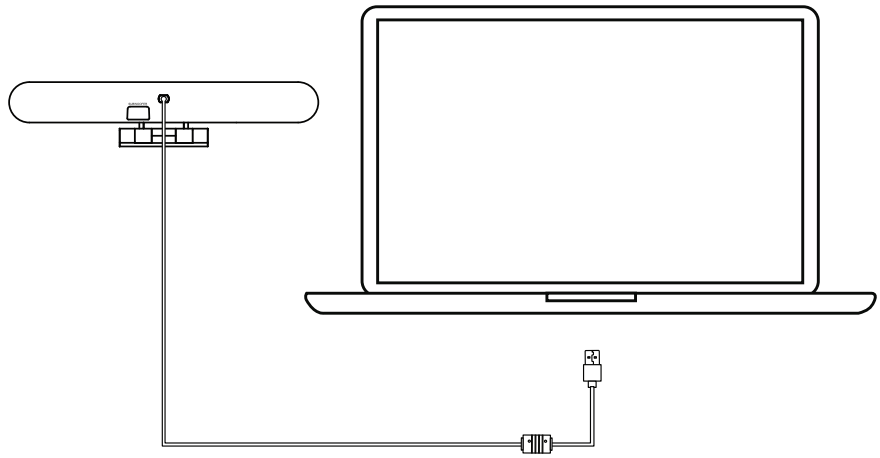

Connect the IKON 100 -4K to PC/ LAPTOP through USB cable, and connect the PC/ LAPTOP to DISPLAY through HDMI Cable

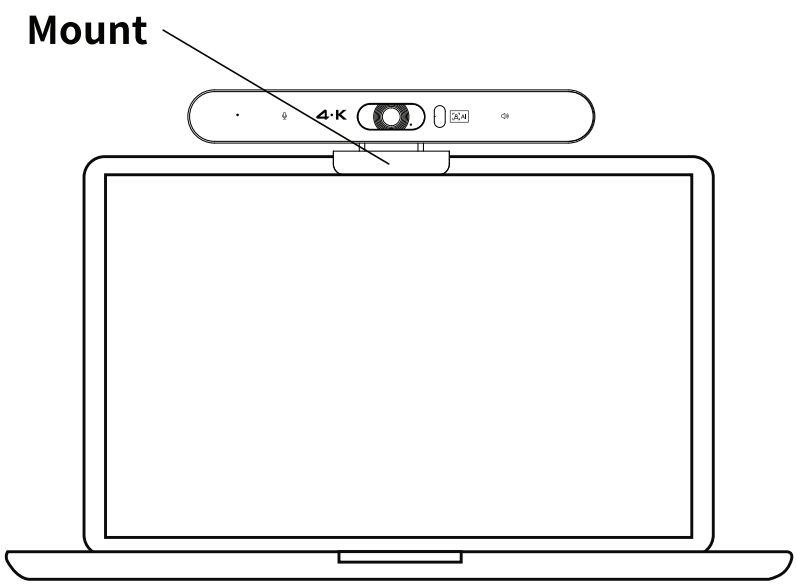

2

3

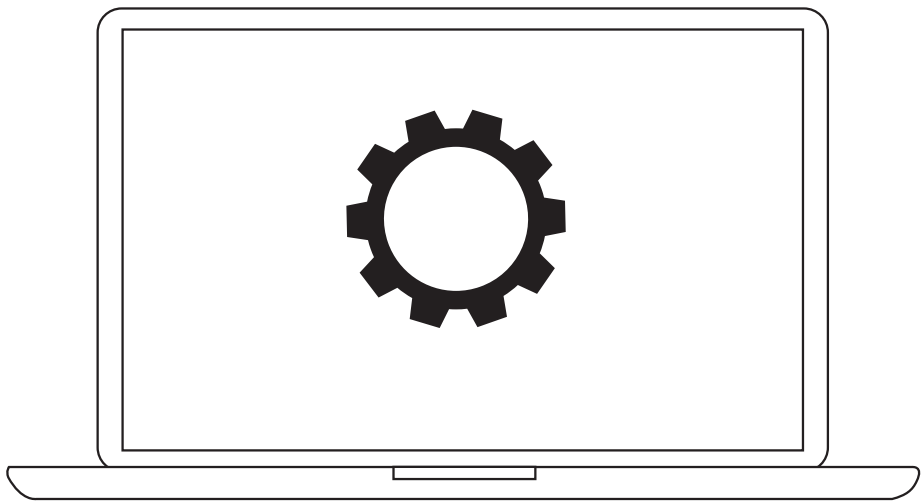

In computer/conference software settings, choose the source of camera, microphone and speaker from the *IKON 100-4K*

Camera preset settings

Adjust the camera view to the position you want to preset, then long press 1 (or 2, 3) button for 2 seconds. After a hint tone, camera preset 1 is set successfully.
Repeat the above steps, press 1, 2, 3 keys respectively, you can set 3 preset positions in total.
Repeating the same key will overwrite the previous preset and update it to the latest preset.

Camera Remote Control

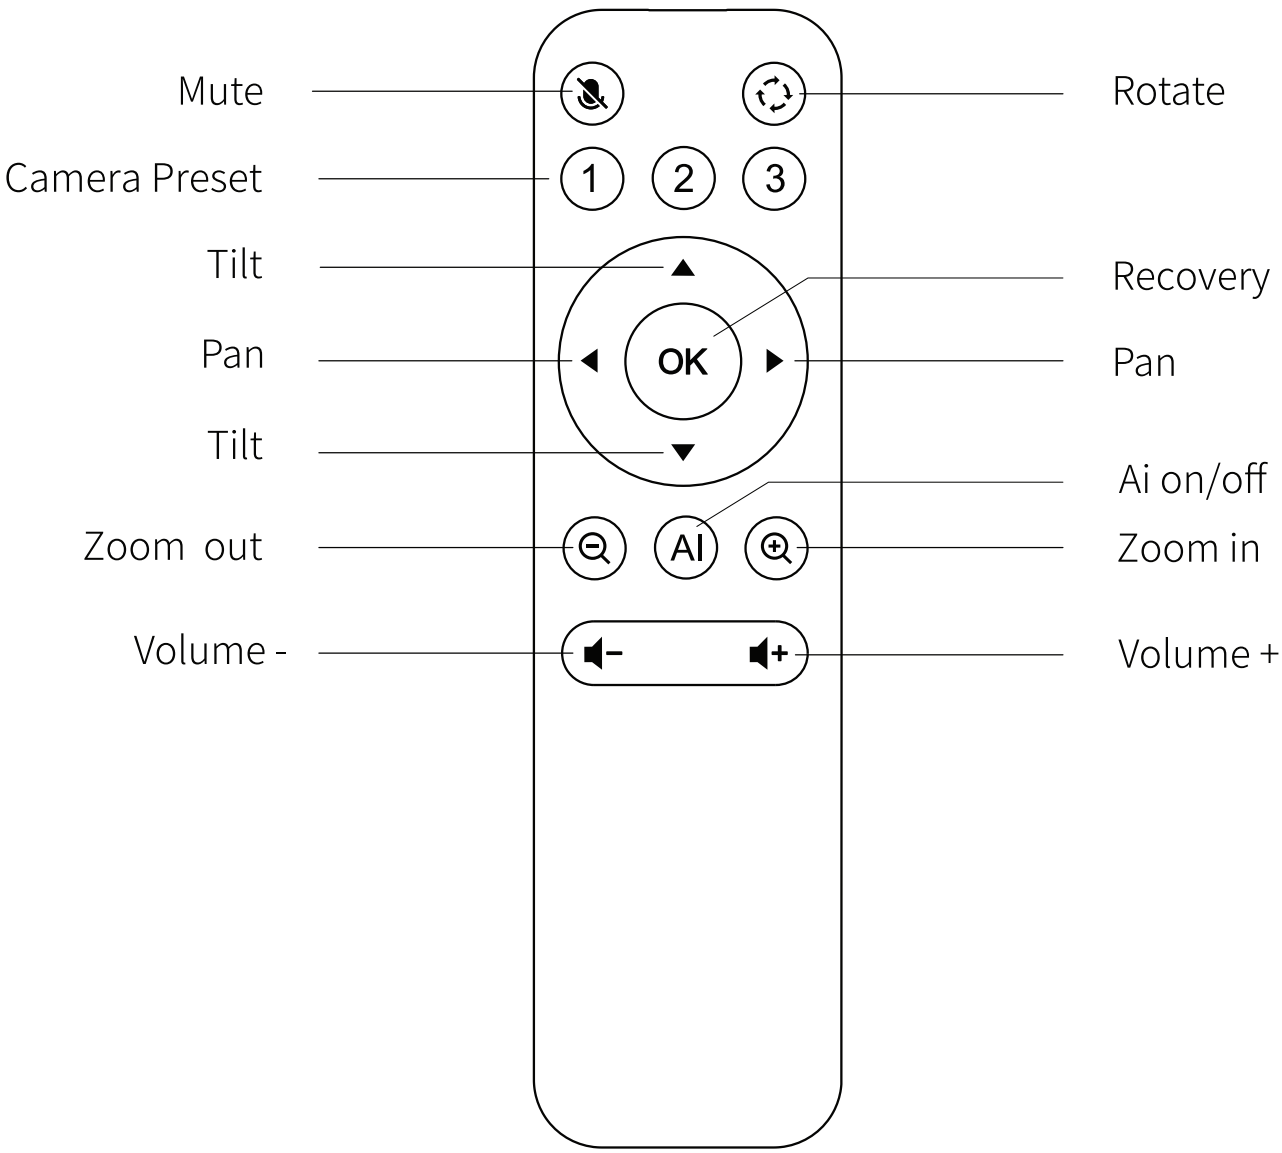

Points for Attention

1. You can't connect multiple Cameras to the computer or intelligent device at the same time, including the native device, or else a squeak may appear during the call.
2. It is required to connect the USB cable directly to the USB interface of the computer device. It may cause operation problems if it is connected through the USB hub.
3. Check whether the device driver is installed and connected successfully: check whether the default device displays "native device model" in the options of playback (output) and recording (input) of the sound and audio device properties of the computer control panel option, if not, re-select "Native device model" and confirm.
4. When use, it can adjust the volume through the speaker option on the computer if necessary. When using instant messaging or Internet phone application software, please set the device of the model as the preferred audio device.
5. Do not repair the device by yourself or else it may cause electric shock. Please contact your seller if there is any problem needing repair.

Service and Support:

support@atnetindia.net
1800-425-5847

Manufactured in India by

A&T™
EXPERIENCE NEXT

A&T Video Networks Private Limited ®