

SNAP U4

AI Driven Huddle Room Camera




User Manual




Overview

The SNAP U4 is a high - quality audio / video system, which consists of Beamforming Microphone pickup and UHD camera and has the function of manual and automatic screen adjustment, echo cancellation and noise reduction. Featured by installation of various application scenarios, flexible adjustment of camera angle and easy operation of remote control, the equipment can be used in daily video conference of enterprise, remote education, live broadcast and telemedicine.

About the device

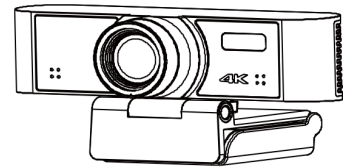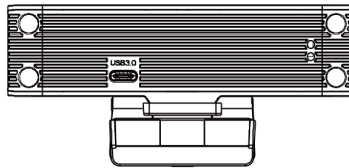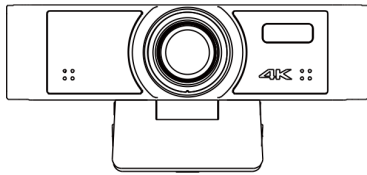

Remote Control with Key

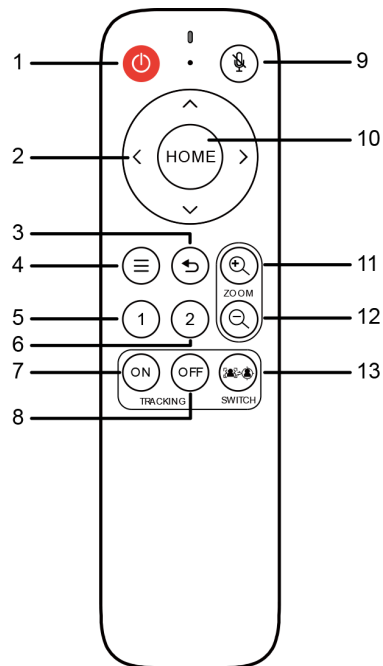


No.	Name	Function Description
1	Standby Key	Turn on/off or wake up the device.
2	Direction Key	Adjust the menu cursor and menu parameters.
3	Return Key	Return to the upper level of the menu.
4	Menu Key	Open the menu or exit the menu.
5	No. 1 Preset Key	No. 1 preset position, long press for 3 seconds to set the preset position, short press to adjust the preset position.
6	No. 2 Preset Key	No. 2 preset position, long press for 3 seconds to set the preset position, short press to adjust the preset position.
7	TRACKING ON Key	Tracking on key, you need to click the SWITCH button first and then click the "ON button" to turn on the tracking function or automatic frame selection function.
8	TRACKING OFF Key	Tracking off key, when the tracking function or automatic frame selection function is turned on, directly click the "OFF button" to turn off the tracking function or automatic frame selection function.
9	Mute Key	Turn the microphone on or off. When the microphone is turned off, there is a mute icon on the video.
10	HOME Key	When the menu is not turned on, click the "HOME button" to restore to the state of the maximum angle of view without calling zoom. When the menu is opened, click the "HOME button" to confirm menu and enter submenu.
11	ZOOM + Key	Digital Zoom In (zoom in or zoom out is not supported when the tracking function or the automatic frame selection function is turned on).
12	ZOOM - Key	Digital Zoom Out (zoom in or zoom out is not supported when the tracking function or the automatic frame selection function is turned on).
13	SWITCH Key	Click the first "SWITCH Key", the image display is currently the tracking function (target tracking) or automatic frame selection function (auto framing). Click the second "SWITCH Key" to switch the current function.

Packing List


Name	Quantity
Camera	1
Remote Control	1
USB Cable	1
User Manual	1

Camera Installation

When the monitor thickness is less than or equal to 45mm, the mounting method can be selected to mount the conference camera product on the monitor. The specific installation is shown in the following figure:

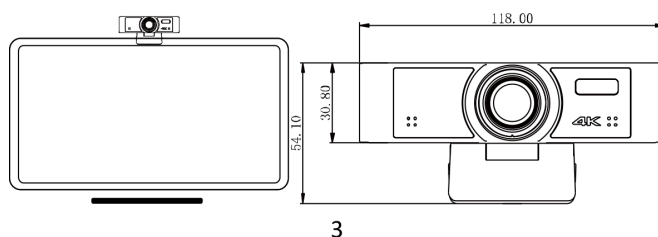

Mount the conference camera product on the Tripod. The specific installation is shown in the following figure:

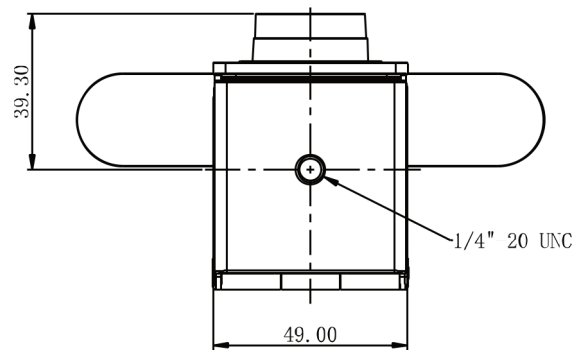

How to operate

1. Open the product packaging, take out the device and accessories, and check the number of packing lists.
2. The device can be installed according to the application scenario of the audio and video network fixed and placed.
3. First, insert the Type - C plug of the Type - C conversion cable into the corresponding socket of the device, and insert the USB plug of the USB socket of the computer equipment.
4. When the device and the computer are connected, the device driver will be installed automatically. After the installation is successful, the computer screen will prompt that the device is ready or the device can be used.

Maintenance

1. If the camera is not used for a long time, please disconnect the power after use.
2. Use soft cloth or cotton paper to remove dust from the camera housing.
3. When cleaning the camera lens, please use dry soft cloth to wipe, if dirt is serious, use neutral cleaner gently. Do not use strong or corrosive detergent, lest the lens scratch, affect the image effect.

Avoid Using

1. The camera should avoid shooting particularly bright objects, such as sunlight, lights, etc.
2. The camera should not work under unstable lighting conditions, otherwise the image will flash.
3. Do not use around facilities that can transmit high-power radio waves, such as television station or radio-transmitting station.

Please do not attempt to repair the device, or there is a risk of electric shock. If there is a problem that needs to repair, please contact your dealer For Installation, Service and Support: Email support@atnetindia.net

Manufactured in India by



A&T Video Networks Private Limited ®